


Xbus address	DIP 12345	Xbus address	DIP 12345	Xbus address	DIP 12345
invalid	00000	11	11010	22	01101
1	10000	12	00110	23	11101
2	01000	13	10110	24	00011
3	11000	14	01110	25	10011
4	00100	15	11110	26	01011
5	10100	16	00001	27	11011
6	01100	17	10001	28	00111
7	11100	18	01001	29**	10111
8	00010	19	11001	30	01111
9	10010	20	00101	31	11111
10	01010	21	10101	0-off	1-on

DIP 6		DIP 7		DIP 8
0	1	0	1	Not used
Lenz	Roco	address 1-105	address 101-205	

* Address „29” is usually used with Lenz LI100 interface.

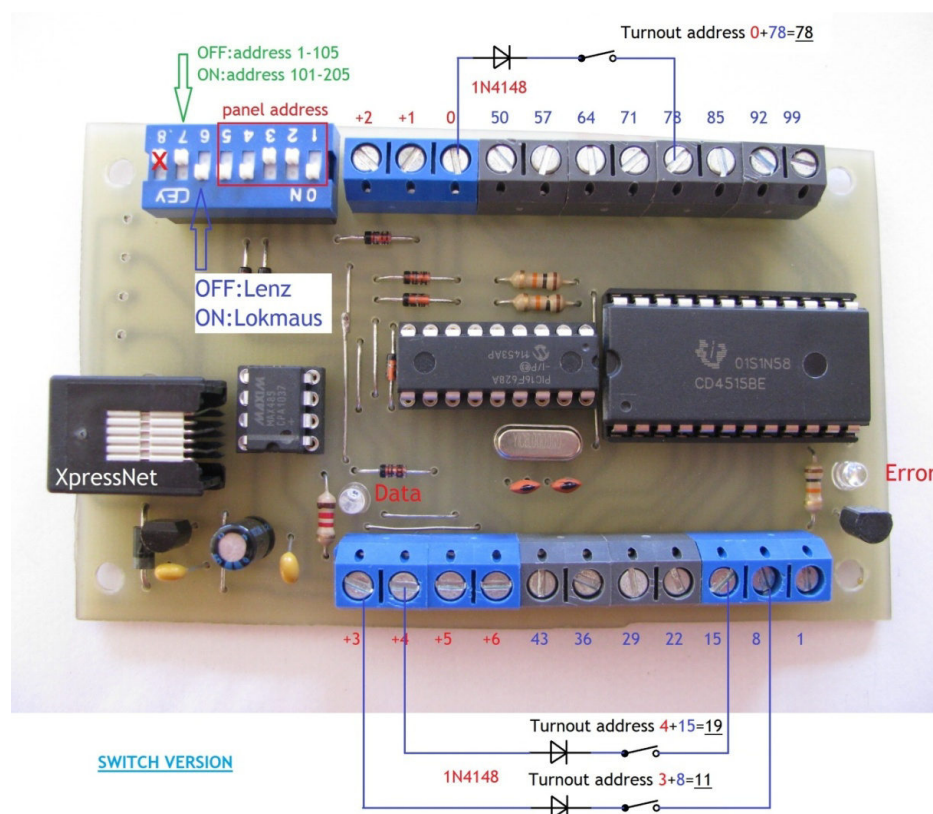

LED Error status:

off - normal mode

on - no DCC signal, power off

blinks - could not connect to command station (restart or try with another address)

After you changed DIP switch position the module needs to restart!!!

(disconnect XpressNet cable)